




#### Applicative characteristics

- The PC67 displacement transducer was developed to guarantee a high protection level (IP67) in applications under harsh conditions and outdoors, where it may be necessary to work in the presence of dust, dirt, or liquids (not in prolonged immersion).
- The robust structure of the PC series has been improved thanks to a sealing system (patent pending) that makes it extremely reliable.
- Ideal for mobile hydraulic applications, on agricultural machines, earth-moving equipment and utility vehicles.

#### TECHNICAL DATA

Useful electrical stroke (C.E.U.)	50/100/130/150/175/200/225/275/300/360/375/400/450/500/600/750
Independent linearity (within C.E.U.)	$\pm 0,05\%$ $\pm 0,075\%$ for stroke $\leq 150$ mm
Resolution	Infinite
Repeatability	0,01 mm
Electrical connection	4 pole M12 connector
Protection	IP67 (use M12 4-pin female connector with IP67 protection level or higher)
Life (NOT for prolonged immersion)	$> 25 \times 10^6$ m strokes, or $> 100 \times 10^6$ maneuvers, whichever is less (within C.E.U.)
Displacement speed	Standard $\leq 3$ m/s max $\leq 5$ m/s
Displacement force	$\leq 30$ N
Vibrations	5...2000Hz, $A_{max} = 0,75$ mm amax. = 20 g
Shock	50 g, 11ms.
Tolerance on resistance	$\pm 20\%$
Recommended cursor current	$< 0,1 \mu A$
Maximum cursor current	10mA
Maximum applicable voltage	60V
Electrical isolation	$> 100 M\Omega$ at 500V~, 1bar, 2s
Dielectric strength	$< 100 \mu A$ at 500V~, 50Hz, 2s, 1bar
Dissipation at 40°C (0W at 120°C)	3W
Temperature Coefficient of the resistance	-200...+200 ppm/°C typic
Actual Temperature Coefficient of the output voltage	$\leq 5$ ppm/°C typic
Working temperature	-30...+100°C
Storage temperature	-50...+120°C
Case material	Anodised aluminium
Control rod material	C45 steel, chromium plated 20 $\mu m$
Mounting method	2 selfloading and selfaligning ball-joints

#### MECHANICAL DIMENSIONS

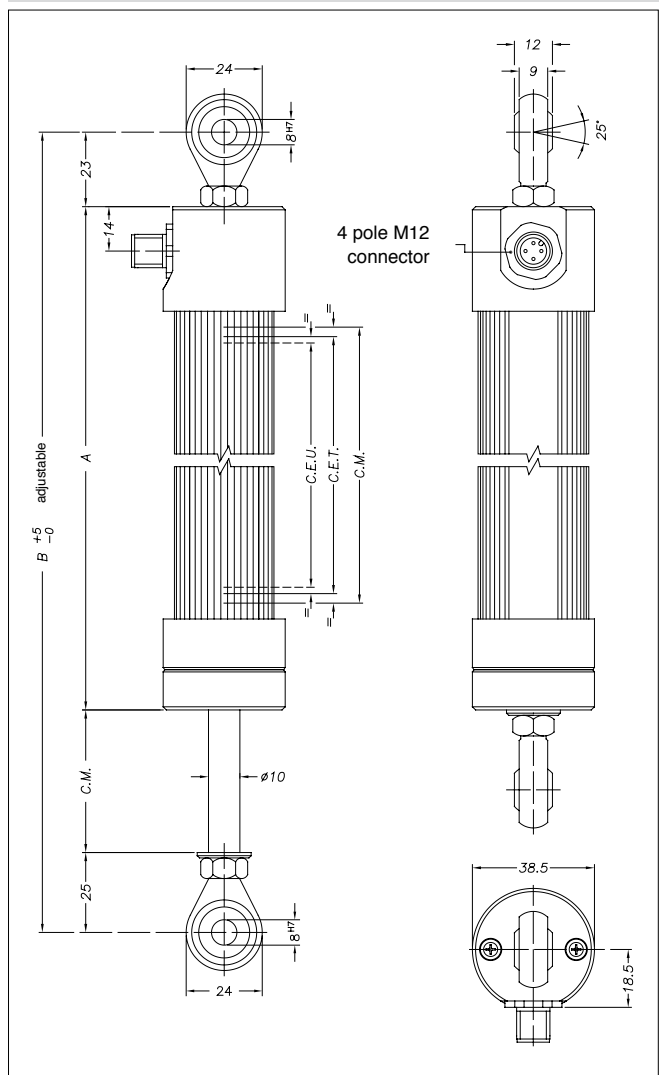

## MECHANICAL / ELECTRICAL DATA

MODEL		50	100	130	150	175	200	225	275	300	360	375	400	450	500	600	750	
Useful electrical stroke (C.E.U.) +3/-0	mm	50	100	130	150	175	200	225	275	300	360	375	400	450	500	600	750	
Theoretical electrical stroke (C.E.T.) ±1	mm	C.E.U. + 3					C.E.U. + 4					365	380	406	457	508	609	762
Resistance (C.E.T.)	kΩ	5															10	
Mechanical stroke (C.M.)	mm	C.E.U. + 9					C.E.U. + 10					386	412	463	518	619	772	
Case length (A)	mm	C.E.U. + 148					C.E.U. + 149					515	531	557	608	683	784	937
Min. distance between ball-joints	mm	C.E.U. + 196					C.E.U. + 197					563	579	605	656	731	832	985

Note: It is recommended to keep the sliding parts lubricated, at least every 6 months.

## ELECTRICAL CONNECTIONS

Connector output

- 4 nc
- 3 (+)
- 2
- 1 (-)

Connection side

C.E.U.  
C.E.T.  
C.M.

### INSTALLATION INSTRUCTIONS

- Respect the indicated electrical connections (DO NOT use the transducer as a variable resistance)
- When calibrating the transducer, be careful to set the stroke so that the output does not drop below 1% or rise beyond 99% of the supply voltage.

## ORDER CODE

Displacement transducer **PC67**

**Model**

No certificate enclosed	<b>0</b>
Linearity curve to be enclosed	<b>L</b>

Example: **PC67-0300 0000X000X00**  
 Displacement transducer model PC67, 4 pole M12 connector output, useful electrical stroke (C.E.U.) 300mm.

## ACCESSORIES (to order separately)

4 pole M12 female connector axial, IP67-IEC48B, wire clamp for ø6-ø8mm wire	<b>CON293</b>
4 pole M12 female connector radial 90°, IP67	<b>CON050</b>

GEFRAN spa reserves the right to make any kind of design or functional modification at any moment without prior notice