



Dimensions 48x48x80 mm (1/16 DIN)

Main features

- Operator interface with large LCD Display, customizable, with choice of colors
- Scrolling diagnostics messages, configurable, in the selected language
- Easy, guided configuration, copy/paste parameters even with power off
- Preventive maintenance with energy counters (kWh) and load switching
- 16 function block applications
- Timer, setpoint and algorithm programmer for controlling motorized valves
- Advanced tuning of control parameters
- Different password levels
- Universal input configurable for thermocouples, resistance thermometers, linear inputs
- Remote setpoint input
- Relay, logic, isolated analog outputs
- Up to two CT inputs for interrupted load diagnostics
- RS485 serial communication in Modbus RTU
- Removable faceplate for immediate replacement
- Sampling time 60ms

PROFILE

Operator interface

Large LCD display with customization of colors assigned to PV and SV display, of color of plastic faceplate, and of logo.

Scrolling alphabetic display of 25 messages (32 letters each), completely configurable and savable, in three languages. Thanks to language selection and clear scrolling messages for diagnostics, alarms, and process state, the controller speaks the user's language.

Easy Configuration

Guided configuration for manual-free programming, with a few essential parameters and on-line help messages.

Ability to clone configuration among controllers, even with power off and in the field, thanks to a mini portable configurator with Zapper battery.

Extended configuration, creation of work recipes, and firmware updates via PC and GF_eXpress software, even without powering the controllers.

Thanks to the Smart Configurator function, you obtain the required parameter recipe by answering a few simple questions.

Local configuration and operation with only four keys assigned to LEDs that serve as feedback for the pressed key and as guide to specify appropriate steps.

The initial parameters can always be reset, both from the keypad and from the GF_eXpress Software tool.

Diagnostics, Preventive Maintenance, and Energy Monitor

Complete diagnostics for broken or incorrectly connected probe, total or partial load break, out of range variables, and control loop faults.

Thanks to the switching count and to the settable alarm thresholds, you can program preventive maintenance to replace worn actuators.

An internal energy counter with alarm for abnormal variations totalizes energy consumptions and costs for constant control

Function block applications

Sixteen AND, OR, Timer Function Blocks let you create customizable logic sequences for complete and flexible machine control.

The controller's hardware resources are exploited completely, without any need for external devices such as timers and small PLCs

Tuning

Advanced tuning algorithms ensure stable and accurate control even with critical or very rapid thermal systems, engaging automatically when necessary.

Timer

Three types of timers let you set delay times before activating the control, hold times on the setpoint value, and timed changes of programmed setpoints.

Setpoint Programmer

Models with twelve ramp and hold steps, groupable in four programs, with enable inputs and event outputs, are available for applications with setpoint profiles.

On-board configuration and graphic configuration with GF_eXpress.

Valve Positioner

Models to control motorized valves, without feedback.

Valve position is calculated and shown on the display.


General characteristics

The controller is completely software configurable without accessing the internal electronics.

The universal main input accepts thermocouple sensors, resistance thermometers, and linears.


The controller can be replaced at any time simply by removing the faceplate, without any additional procedures.

DISPLAY AND KEYS

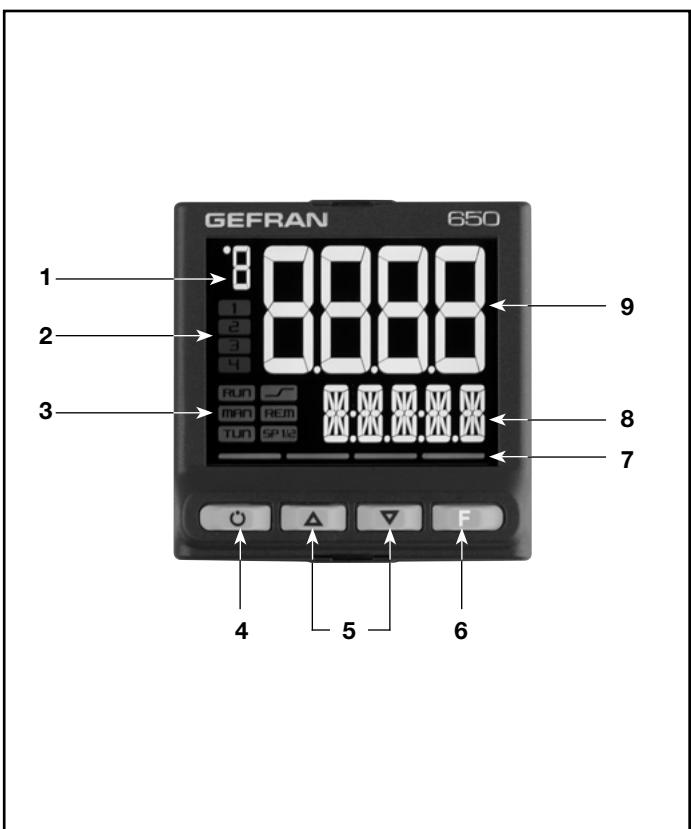

1. Temperature unit of measurement or number of program running.
2. State of outputs OUT1, OUT2, OUT3, OUT4.
3. Controller function states:
 - RUN = setpoint programmer active;
 - \swarrow/\searrow = setpoint ramp active;
 - TUN = PID parameters tuning active;
 - MAN = manual/automatic (off = automatic control, on = manual control);
 - REM = remote setpoint enabled;
 - SP1/2 = setpoint active (off = setpoint 1, on = setpoint 2).
4. Work mode key (manual/automatic) in standard mode. A function can be assigned via parameter but1. The key is active only when the display shows the process variable
5. Up/down keys: raise/lower the value of the parameter displayed on the SV or PV display.
6. F key: lets you navigate among controller menus and parameters. Confirms the parameter value and selects the next parameter.
7. Key pressed signals.
8. SV display: setpoint value, description of parameters, diagnostics and alarm messages. Configurable with parameter dS.SP (default = setpoint).
9. PV display: process variable, parameter values.

DIMENSIONS AND DRILLING TEMPLATE

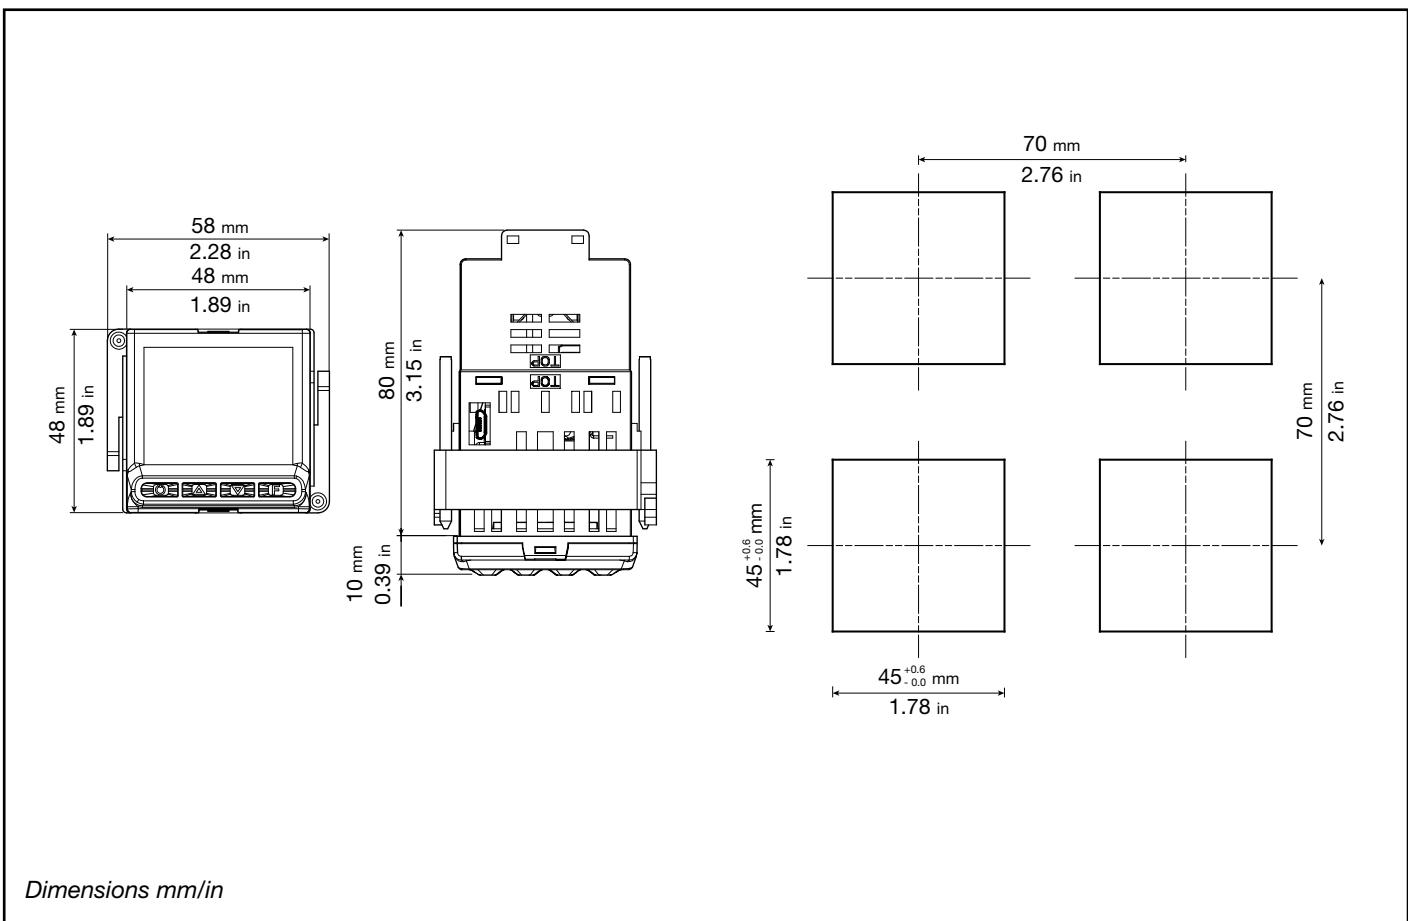

TECHNICAL DATA

OPERATOR INTERFACE

DISPLAY	Type	LCD black background
	Screen area (L x H)	35 × 30 mm
	Lighting	Backlit with LEDs, life > 40,000 hours @ 25°C
	PV display	Number of digits: 4 to 7 segments, with decimal point Digit height: 17 mm Color: white or “custom”
	SV display	Number of digits: 5 to 14 segments, with decimal point Digit height: 7.5 mm Color: green or “custom”
	Unit of measurement	Selectable, °C, °F or custom 1 Color: same as PV display
KEYPAD	Controller state signals	Number: 6 (RUN, MAN, _/-, REM, SP1/2) Color: amber
	Output state signals	Number: 4 (1, 2, 3, 4) Color: red
		Number of keys: 4 silicon (Man/Auto, INC, DEC, F) Type: mechanical

INPUTS

1) Programming is done with the GF_eXpress configuration program.

DIGITAL INPUTS	Type	voltage-free contact, or NPN 24 V - 4,5 mA, or PNP 12/24 V - max 3,6 mA <i>(for detail see electrical connections)</i>
	Isolation	500 V
	Number	3 max
OUTPUTS		
	Relay (R)	Number: 4 max Type of relay contact: NO Max. current: 5 A, 250 VAC Minimum load: 5 V, 10 mA Life cycle: > 100.000 operations Double isolation
	Logic (D)	Number: 2 max Type: for solid-state relays Voltage: 24 V ±10% (min 10 V @20 mA) Isolated from main input
	Triac (long life relè) (T)	Number: 1 max Load: resistive Voltage: 75...264 VAC Current max: 1 A Isolation 3 kV snubber circuit integrated zero crossing switching
	Continuous (C)	Number: 1 max Current: 4...20mA $R_{out} < 500 \Omega$ Resolution: 12 bit Isolated from main input
	Analog retransmission (A1)	Number: 1 max 0...10 V, max 20 mA, $R_{out} > 500 \Omega$ 0...20 mA, 4...20 mA, $R_{out} < 500 \Omega$ Resolution: 12 bit Isolated from main input
ALARMS	Number of alarm functions	4 max, assignable to an output
	Possible configurations	Maximum, minimum, symmetric, absolute/relative, exclusion at firing, memory, reset from keypad and/or contact, LBA, HB HBB Hold Back Band if enabled with Programmer function
CONTROL FUNCTIONS		
CONTROL	Type	Single loop
	Control	PID, ON/OFF, single action heat or cool, double action heat/cool
	Control output	Continuous or ON/OFF Cycle time: constant or optimized (BF)
	Control output for motorized valves	OPEN/CLOSE for floating motorized valve on Relay, Solid-state, Triac outputs
SETPOINT PROGRAMMER	Number of programs	Max 4 Start / Stop / Reset / Skip via digital inputs and/or outputs from logic operations Output state: Run /Hold / Ready / End
	Number of steps	Max 12, each with own setpoint, ramp time and hold time Times settable in HH:MM or MM:SS Max 4 consents, configurable for ramp and for hold Max 4 events, configurable in ramp and in hold
MULTIPLE SETPOINTS	Number of setpoints	Max 4, selectable from digital input Each setpoint change is subject to set ramp, different for up and down ramp
LOGIC¹ OPERATIONS	Function blocks	Max 16, with 4 input variables per block. The result can act on the state of the controller, of the programmer or alarms and outputs. Each function contains an incorporated timer block timer.
TIMER FUNCTION	Modes	START / STOP STABILIZATION (timer is on when PV enters a band set around setpoint; at end of count you can activate an output, shut down SW or change SP1/SP2) FIRING (timed activation of control after power on)


1) Programming is done with the GF_eXpress configuration program.

ENERGY COUNTER		Calculation done on nominal line voltage and nominal load power or on rms current measured on load via CT
DIAGNOSTIC		Short circuit or open circuit (LBA alarm) Interrupted or partially interrupted load (HB alarm) Short circuit of control output (SSR alarm)
RETENTIVE MEMORY	Type	EEPROM
	Max. number of writes	1.000.000
SERIAL INTERFACE		
	Type Baudrate Protocoll	RS485 1200, 2400, 4800, 9600, 19.200, 38.400, 57.600, 115.200 bit/s MODBUS RTU Isolated from main input
GENERAL DATA		
POWER SUPPLY	Operating voltage	100...240 VAC/VDC ±10%, 50/60 Hz (on request 20...27 VAC/VDC ±10%)
	Power dissipation	5 W max
	Protections	Overshoot 300 V / 35 V
	Connection	Screw terminals and crimp connector, max. wire section 1 mm ²
CONNECTIONS	Serial configuration port (for USB connection)	Connector: microUSB
	Inputs and outputs	Screw terminals and crimp connector, max. wire section 2,5 mm ²
AMBIENT CONDITIONS	Use	Indoor
	Altitude	2,000 m max
	Operating temperature	-10 ... +55 °C (as per IEC 68-2-14)
	Storage temperature	-20 ... +70 °C (as per IEC 68-2-14)
	Relative humidity	20...85% RH non-condensing (as per IEC 68-2-3)
PROTECTION LEVEL		IP 65 on front panel (as per IEC 68-2-3)
ASSEMBLY	Positioning	On panel, removable faceplate
	Installation regulations	Installation category: II; Pollution degree: 2 Isolation: double
DIMENSIONS		48 X 48 mm (1/16 DIN), Depth: 80 mm
WEIGHT		0,16 kg
CE STANDARDS	EMC (electromagnetic compatibility)	Conforms to Directiv 2014/30/EU with reference to standard EN 61326-1 emission in industrial environment class A for models 650 LV emission in residential environment class B for models 650 HV
	Safety: LVD	Conforms to Directiv 2014/35/EU with reference to standard EN61010-1



ACCESSORIES

Code	Description
F060800	Cable for programming with PC, USB-TTL 3 V with USB – microUSB connectors, length 1.8 m
F043958	“GF_eXpress” software CD
F060909	Configuration kit for new instruments GF_eXK-3-0-0
F060908	Portable configurator, complete with cable and Zapper
51968	Rubber gasket 48×48 front-box
51250	Fastening box to panel
51294	Protection of contacts at box bottom
51454	18 contacts at box bottom
330200	Current transformer (CT) 50/0.05 A
330201	Current transformer (CT) 25/0.05 A

CONNECTION DIAGRAM

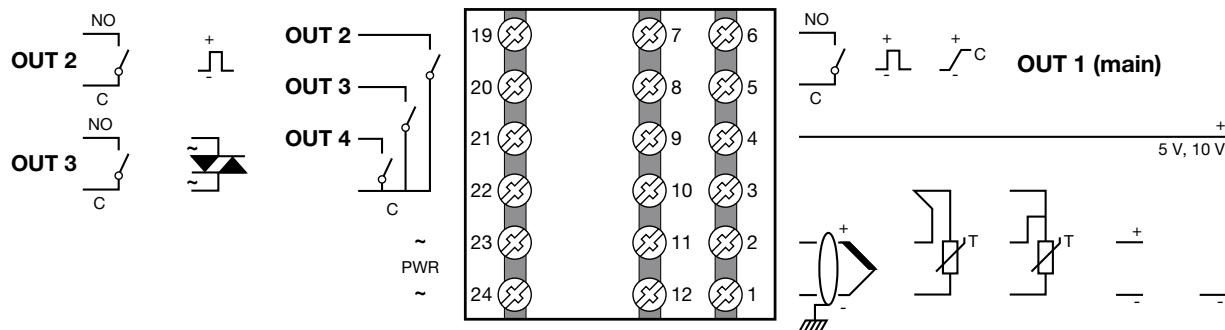

OPTIONS

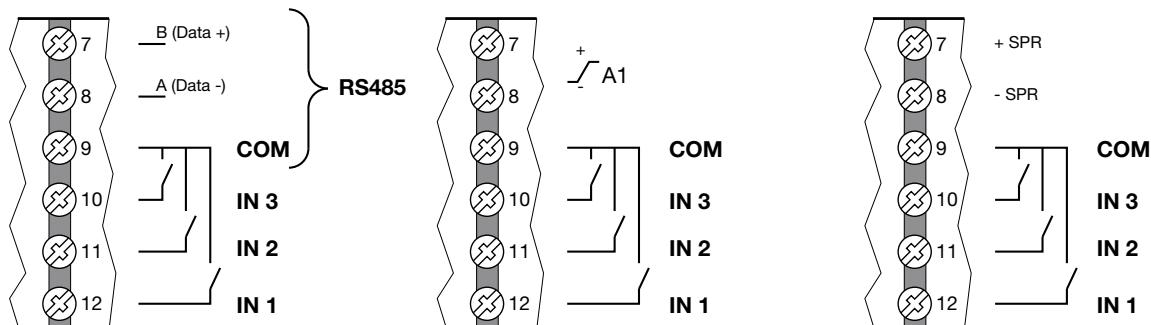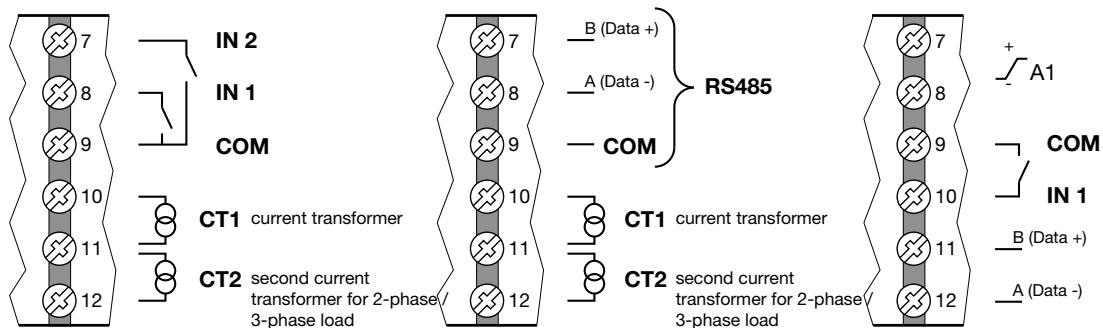


LEGEND

PWR	Power supply	Isolated digital inputs	NO	Relay output	Logic output
~	Linear input in voltage / current		C		
+ -	Input for current transformer	Thermocouple input			
+ SPR - SPR	Remote Set-point	Input PT100 JPT100 2 / 3 wires			RS485 serial line
				A1	Isolated analog output



ATTENTION: For correct installation, read the warnings in the instruction manual.

ORDER METHODS

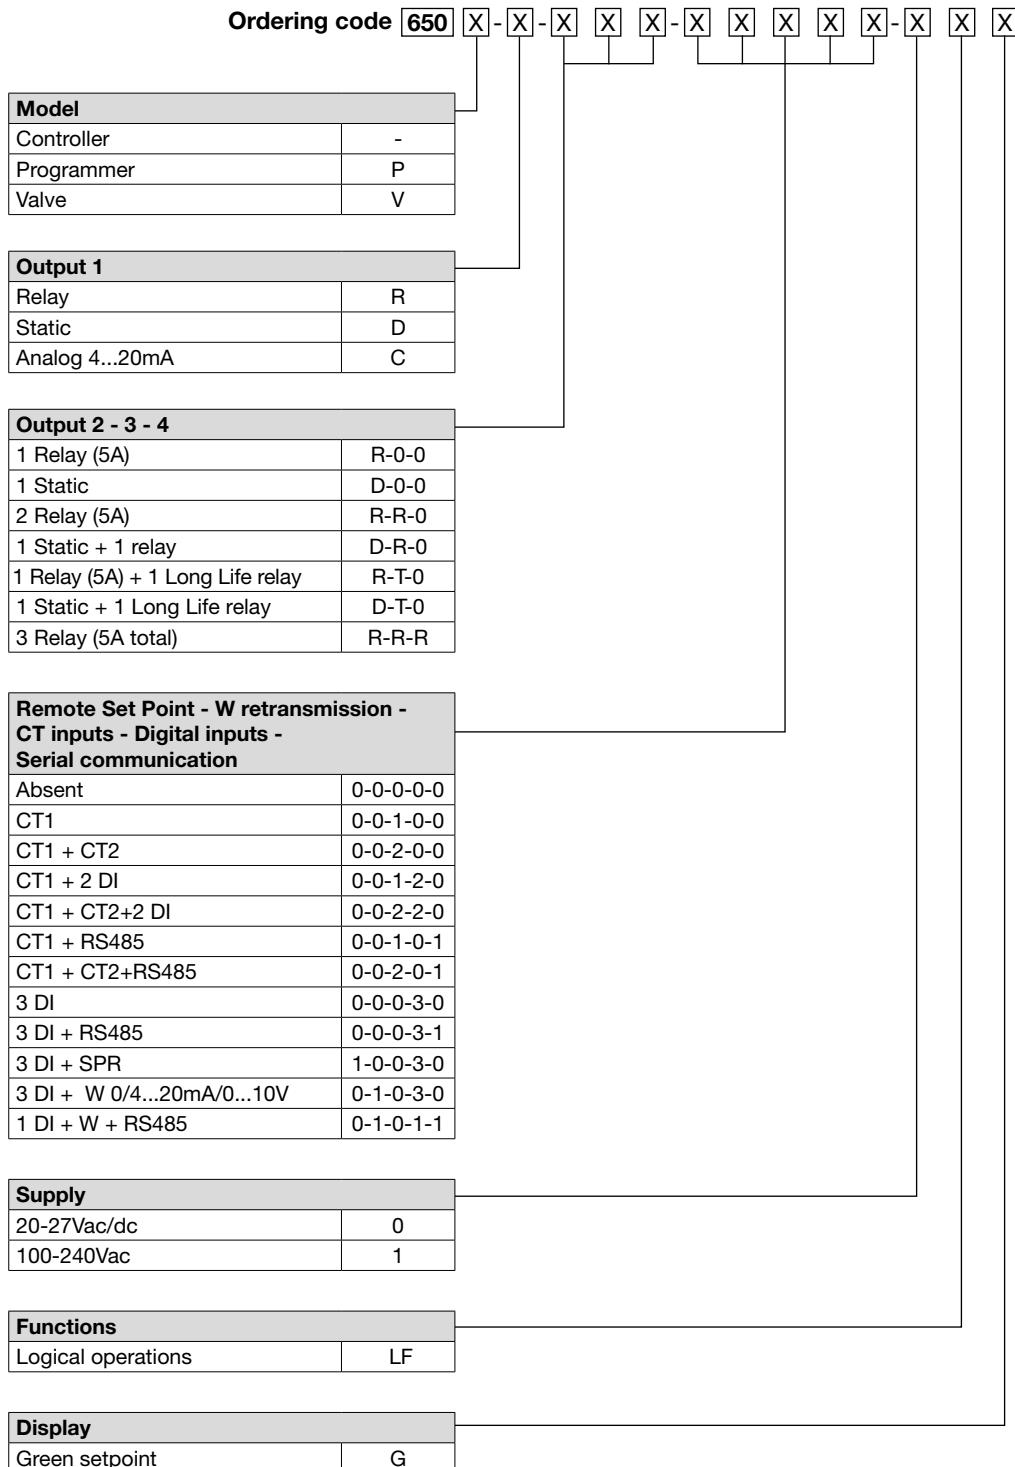

Power supply 100...240 VAC

Code F	Model	Valves	Programmer	Inputs		Outputs				RS485	Logic functions	Total Number of Outputs
				Digital	CT	SPR	Relay	Triac	Logic			
F060558	650-D-R00-00000-1-G						1		1			2 outputs
F059574	650-R-R00-00000-1-G						2					
F060566	650-D-R00-00120-1-G			2	1		1		1			
F060562	650-D-RR0-00000-1-G						2		1			
F065788	650-R-RR0-00000-1-G						3					
F065789	650-R-RT0-00000-1-G						2	1				
F065790	650-D-RR0-00030-1-G			3			2		1			
F060567	650-D-RR0-00200-1-G				2		2		1			
F060564	650-C-RR0-00000-1-G						2			1		
F060573	650-D-R00-01030-1-G			3			1		1	1		
F065791	650-R-R00-01030-1-G			3			2			1		3 outputs
F060574	650-R-RR0-00101-1-G				1		3				•	
F060563	650-D-RRR-00000-1-G						3		1			
F065792	650-R-RRR-00000-1-G						4					
F060575	650-D-RRR-00220-1LFG			2	2		3		1		•	
F060576	650-D-RRR-00031-1LFG			3			3		1		•	
F065793	650-D-RRR-00201-1LFG				2		3		1		•	
F065794	650-D-RR0-01011-1LFG			1			2		1	1	•	
F060577	650-C-RRR-10030-1LFG			3		1	3			1		
F060578	650V-R-RRR-00000-1-G	•					4					
F060561	650V-R-RRR-00030-1-G	•		3			4					4 outputs
F060565	650P-D-RRR-00000-1-G		•				3		1			
F060560	650P-D-RRR-00030-1LFG		•	3			3		1		•	
F060579	650-D-RRR-01030-1LFG			3			3		1	1	•	
												5 outputs

Power supply 20...27 VAC/VDC

Code F	Model	Valves	Programmer	Inputs		Outputs				RS485	Logic functions	Total Number of Outputs
				Digital	CT	SPR	Relay	Triac	Logic			
F065795	650-D-R00-00000-0-G						1		1			2 outputs
F065796	650-R-R00-00000-0-G						2					
F065797	650-D-R00-00120-0-G			2	1		1		1			
F065798	650-D-RR0-00000-0-G						2		1			
F065799	650-R-RR0-00000-0-G						3					
F065800	650-R-RT0-00000-0-G						2	1				
F065801	650-D-RR0-00030-0-G			3			2		1			
F065802	650-D-RR0-00200-0-G				2		2		1			
F065803	650-C-RR0-00000-0-G						2			1		
F065804	650-D-R00-01030-0-G			3			1		1	1		
F065805	650-R-R00-01030-0-G			3			2			1		3 outputs
F065806	650-R-RR0-00101-0-G				1		3				•	
F065807	650-D-RRR-00000-0-G						3		1			
F065808	650-R-RRR-00000-0-G						4					
F065809	650-D-RRR-00220-0LFG			2	2		3		1		•	
F065810	650-D-RRR-00031-0LFG			3			3		1		•	
F065811	650-D-RRR-00201-0LFG				2		3		1		•	
F065812	650-D-RR0-01011-0LFG			1			2		1	1	•	
F065813	650-C-RRR-10030-0LFG			3		1	3			1		
F065818	650V-R-RRR-00000-0-G	•					4					4 outputs
F065819	650V-R-RRR-00030-0-G	•		3			4					
F065820	650P-D-RRR-00000-0-G		•				3		1			
F065821	650P-D-RRR-00030-0LFG		•	3			3		1		•	
F065822	650-D-RRR-01030-0LFG			3			3		1	1	•	
												5 outputs

Please contact GEFTRAN for information on available codes.

	Conformity TC N° RUД-IT.АЛ32.b.01762
	Conformity C/UL/US File no. E216851
	<p>EMC (electromagnetic compatibility): conforms to directive 2014/30/EU with reference to standard EN 61326-1 emission in industrial environment class A for models 650 LV emission in residential environment class B for models 650 HV</p> <p>Safety LVD: conforms to directive 2014/35/EU with reference to standard EN61010-1</p>

GEFRAN

GEFRAN spa via Sebina,74 - 25050 Provaglio d'Iseo (BS)
 Tel. 03098881 - fax 0309539063 - Internet: <http://www.gefran.com>

DTS_650_05-2022_ENG